



(Todas las dimensiones en mm)


1612E	Marco Puerta	A	2 uds.
1612E	Marco Puerta	B	1 ud.
1622E	Hoja Puerta	A-38	2 uds.
1622E	Hoja Puerta	B-64	2 "
1616E	Zocalo	B-192	1 ud.
1661E	Junquillo	A-289	2 uds.
1661E	Junquillo	B-201	2 "

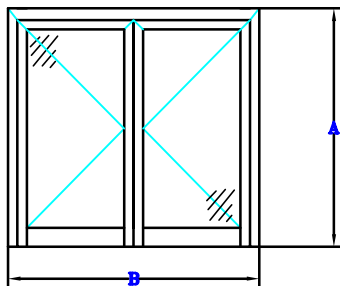


1612E	Marco Puerta	A	2 uds.
1612E	Marco Puerta	B	1 ud.
1622E	Hoja Puerta	A-38	4 "
1622E	Hoja Puerta	(B-70)/2	2 uds.
1616E	Zocalo	(B-326)/2	2 ud.
1651E	Inversor	A-75	1 uds.
1661E	Junquillo	A-289	4 uds.
1661E	Junquillo	(B-344)/2	4 "

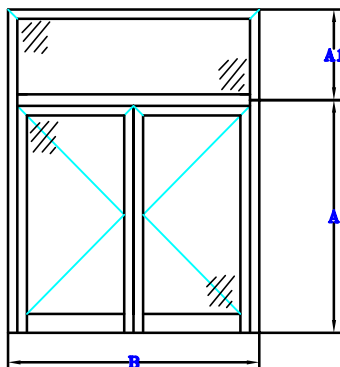

1612E	Marco Puerta	A+A1	2 uds.
1612E	Marco Puerta	B	1 ud.
1622E	Hoja Puerta	A-16	4 "
1622E	Hoja Puerta	(B-70)/2	2 uds.
1616E	Zocalo	(B-326)/2	2 uds.
1651E	Inversor	A-52	1 ud.
1661E	Junquillo	A-250	4 uds.
1661E	Junquillo	(B-344)/2	4 "
1641E	Trav. Puerta	B-66	1 ud.
1661E	Junquillo	A1-98	2 uds.
1661E	Junquillo	B-75	2 "

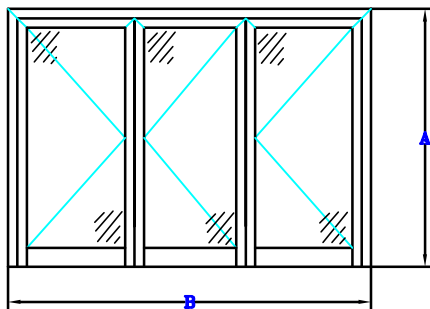

1612E	Marco Puerta	A	2 uds.
1612E	Marco Puerta	B	1 ud.
1622E	Hoja Puerta	A-38	6 "
1622E	Hoja Puerta	(B-76)/3	3 uds.
1616E	Zocalo	(B-460)/3	3 uds.
1651E	Inversor	A-75	2 uds.
1661E	Junquillo	A-289	6 uds.
1661E	Junquillo	(B-487)/3	6 "

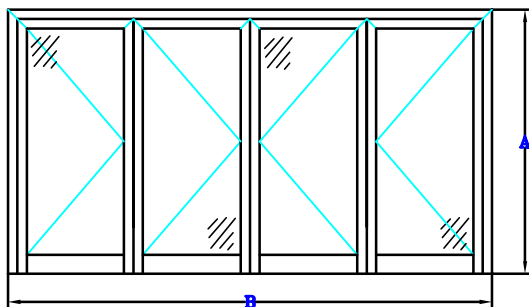

1612E	Marco Puerta	A	2 uds.
1612E	Marco Puerta	B	1 ud.
1622E	Hoja Puerta	A-38	8 "
1622E	Hoja Puerta	(B-82)/4	4 uds.
1616E	Zocalo	(B-594)/4	4 uds.
1651E	Inversor	A-75	3 uds.
1661E	Junquillo	A-289	8 uds.
1661E	Junquillo	(B-630)/4	8 uds.