



(Todas las dimensiones en mm)

1611	Marco Ventana	A	2	uds.
1611	Marco Ventana	B	2	"
1621	Hoja Ventana	A-49	2	uds.
1621	Hoja Ventana	B-49	2	"
1661	Junquillo	A-188	2	uds.
1661	Junquillo	B-144	2	"

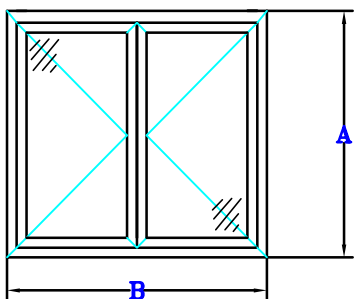


1611	Marco Ventana	A	2	uds.
1611	Marco Ventana	B	2	"
1621	Hoja Ventana	A-49	4	"
1621	Hoja Ventana	(B-55)/2	4	uds.
1651	Inversor	A-121	1	uds.
1661	Junquillo	A-188	4	uds.
1661	Junquillo	(B-245)/2	4	"

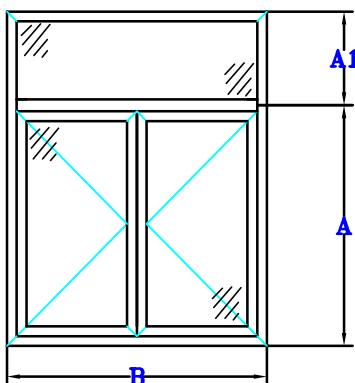


1611	Marco Ventana	A+A1	2	uds.
1611	Marco Ventana	B	2	"
1621	Hoja Ventana	A-34	4	"
1621	Hoja Ventana	(B-55)/2	4	uds.
1651	Inversor	A-106	1	uds.
1661	Junquillo	A-173	4	uds.
1661	Junquillo	(B-245)/2	4	"
1641	Trav. Ventana	B-51	1	ud.
1661	Junquillo	A1-90	2	uds.
1661	Junquillo	(B-60)	2	"

Nota: para realizar un plegado de 180° la, o las hojas centrales deben de ser más pequeñas (<40 mm), para que puedan plegar sobre las laterales

ejemplo: B= 750 $750+13.3=763.3$ 2Lateral 
 $750-26.6=723.4$ 1Central

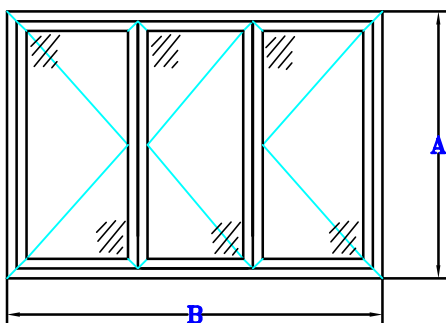

1611	Marco Ventana	A	2	uds.
1611	Marco Ventana	B	2	"
1621	Hoja Ventana	A-49	6	"
1621	Hoja Ventana	(B-61)/3	6	uds.
1651	Inversor	A-121	2	uds.
1661	Junquillo	A-188	6	uds.
1661	Junquillo	(B-346)/3	6	"

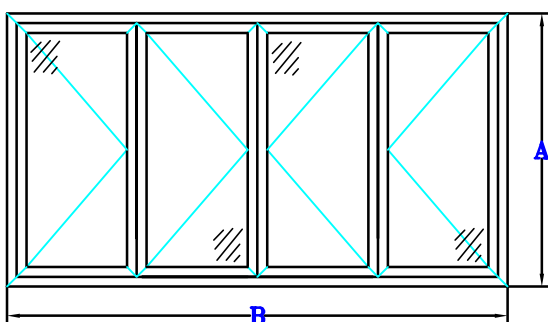

ejemplo: B= 750 $750+20=770$ 2Laterales
 $750-20=730$ 2Centrales
 40mm

1611	Marco Ventana	A	2	uds.
1611	Marco Ventana	B	2	"
1621	Hoja Ventana	A-49	8	"
1621	Hoja Ventana	(B-66.7)/4	8	uds.
1651	Inversor	A-121	3	uds.
1661	Junquillo	A-188	8	uds.
1661	Junquillo	(B-447)/4	8	uds.

Alucan s.a. no se responsabiliza de los posibles errores de estos despieces, pues estos obedecen a calculos teóricos.